


**NPN Silicon RF Transistor**

- For low noise, low distortion broadband amplifiers in antenna and telecommunication systems up to 1.5 GHz at collector currents from 10 mA to 70 mA

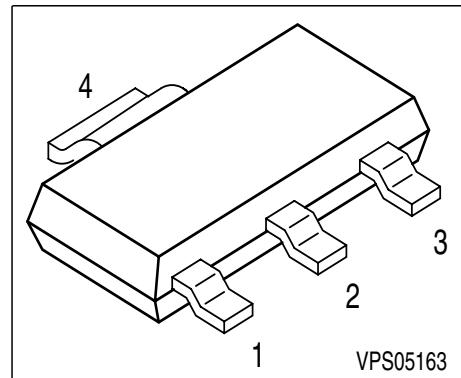

**ESD:** Electrostatic discharge sensitive device, observe handling precaution!

Type	Marking	Pin Configuration				Package
BFG 19S	BFG19S	1 = E	2 = B	3 = E	4 = C	SOT-223

**Maximum Ratings**

Parameter	Symbol	Value	Unit
Collector-emitter voltage	$V_{CEO}$	15	V
Collector-emitter voltage	$V_{CES}$	20	
Collector-base voltage	$V_{CBO}$	20	
Emitter-base voltage	$V_{EBO}$	3	
Collector current	$I_C$	100	mA
Base current	$I_B$	12	
Total power dissipation, $T_S \leq 75^\circ\text{C}$ <sup>1)</sup>	$P_{tot}$	1	W
Junction temperature	$T_j$	150	$^\circ\text{C}$
Ambient temperature	$T_A$	-65 ... 150	
Storage temperature	$T_{stg}$	-65 ... 150	

**Thermal Resistance**

Junction - soldering point	$R_{thJS}$	$\leq 75$	K/W
----------------------------	------------	-----------	-----

<sup>1</sup>  $T_S$  is measured on the collector lead at the soldering point to the pcb

**Electrical Characteristics** at  $T_A = 25^\circ\text{C}$ , unless otherwise specified.

<b>Parameter</b>	<b>Symbol</b>	<b>Values</b>			<b>Unit</b>
		<b>min.</b>	<b>typ.</b>	<b>max.</b>	
<b>DC characteristics</b>					
Collector-emitter breakdown voltage $I_C = 1 \text{ mA}, I_B = 0$	$V_{(\text{BR})\text{CEO}}$	15	-	-	V
Collector-emitter cutoff current $V_{CE} = 20 \text{ V}, V_{BE} = 0$	$I_{CES}$	-	-	100	$\mu\text{A}$
Collector-base cutoff current $V_{CB} = 10 \text{ V}, I_E = 0$	$I_{CBO}$	-	-	100	nA
Emitter-base cutoff current $V_{EB} = 2 \text{ V}, I_C = 0$	$I_{EBO}$	-	-	10	$\mu\text{A}$
DC current gain $I_C = 70 \text{ mA}, V_{CE} = 8 \text{ V}$	$h_{FE}$	40	100	220	-


**Electrical Characteristics** at  $T_A = 25^\circ\text{C}$ , unless otherwise specified.

<b>Parameter</b>	<b>Symbol</b>	<b>Values</b>			<b>Unit</b>
		<b>min.</b>	<b>typ.</b>	<b>max.</b>	
<b>AC characteristics</b> (verified by random sampling)					
Transition frequency $I_C = 70 \text{ mA}, V_{CE} = 8 \text{ V}, f = 500 \text{ MHz}$	$f_T$	4	5.5	-	GHz
Collector-base capacitance $V_{CB} = 10 \text{ V}, f = 1 \text{ MHz}$	$C_{cb}$	-	0.85	1.4	pF
Collector-emitter capacitance $V_{CE} = 10 \text{ V}, f = 1 \text{ MHz}$	$C_{ce}$	-	0.4	-	
Emitter-base capacitance $V_{EB} = 0.5 \text{ V}, f = 1 \text{ MHz}$	$C_{eb}$	-	4.6	-	
Noise figure $I_C = 20 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_{Sopt}, f = 900 \text{ MHz}$ $f = 1.8 \text{ GHz}$	$F$	-	2.5	-	dB
Power gain, maximum available <sup>F)</sup> $I_C = 70 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_{Sopt}, Z_L = Z_{Lopt}, f = 900 \text{ MHz}$ $f = 1.8 \text{ GHz}$	$G_{ma}$	-	13.5	-	
		-	8	-	
Transducer gain $I_C = 30 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_L = 50\Omega, f = 900 \text{ MHz}$ $f = 1.8 \text{ GHz}$	$ S_{21e} ^2$	-	11	-	
Third order intercept point $I_C = 70 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_L = 50\Omega, f = 900 \text{ MHz}$	$IP_3$	-	35	-	dBm
		-	5	-	


$$^1G_{ma} = |S_{21} / S_{12}| (k - (k^2 - 1)^{1/2})$$

**Total power dissipation**  $P_{\text{tot}} = f(T_A^*, T_S)$

\* Package mounted on epoxy

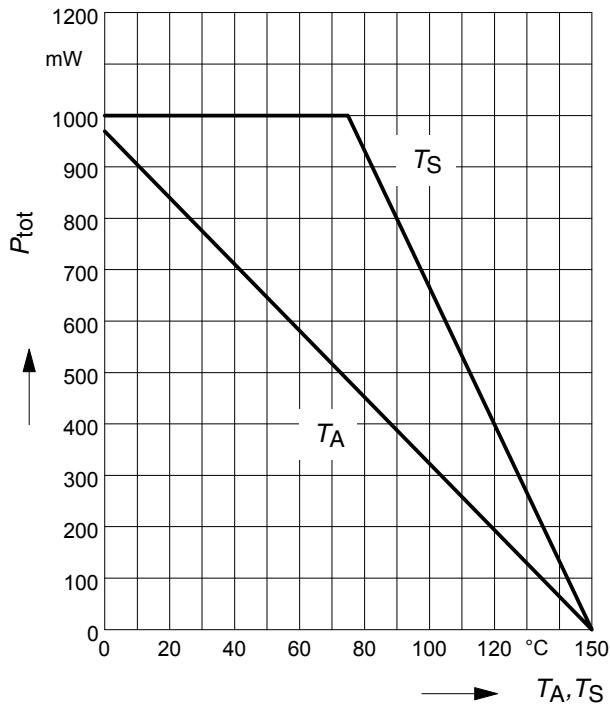


**Permissible Pulse Load**  $R_{\text{thJS}} = f(t_p)$

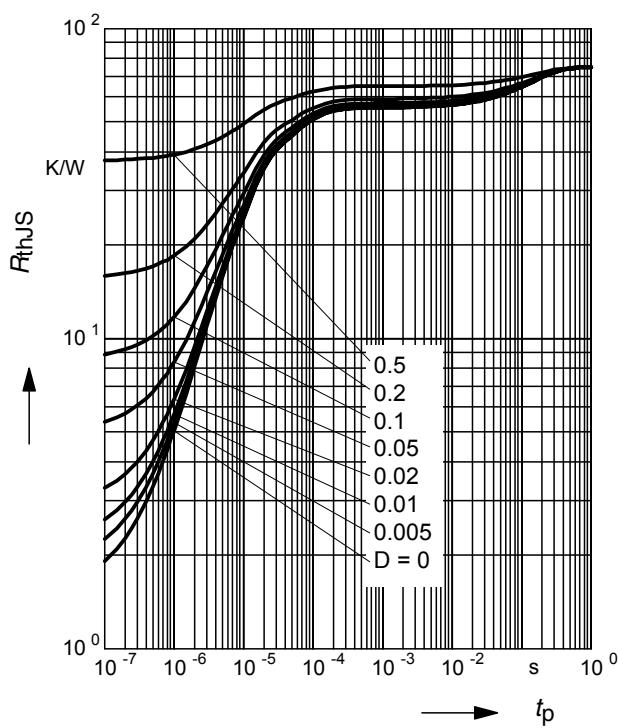


**Permissible Pulse Load**

$$P_{\text{totmax}}/P_{\text{totDC}} = f(t_p)$$

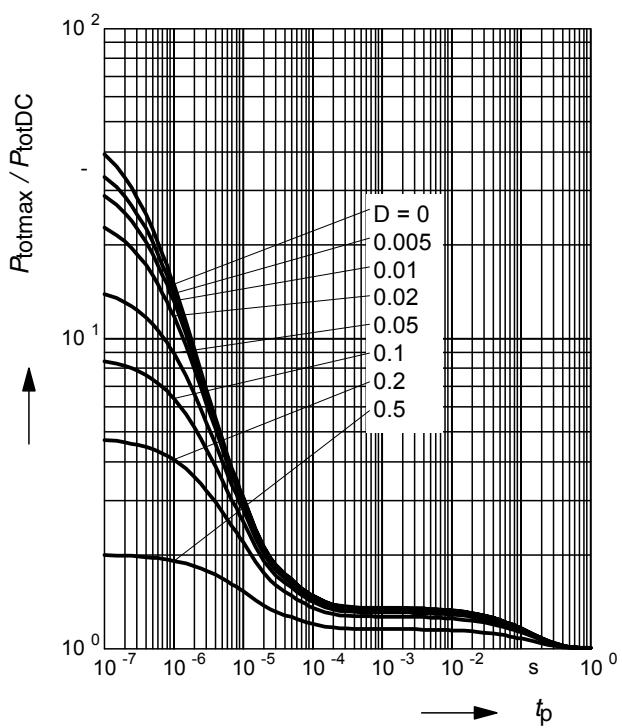


**Collector-base capacitance**  $C_{cb} = f(V_{CB})$

$f = 1\text{MHz}$

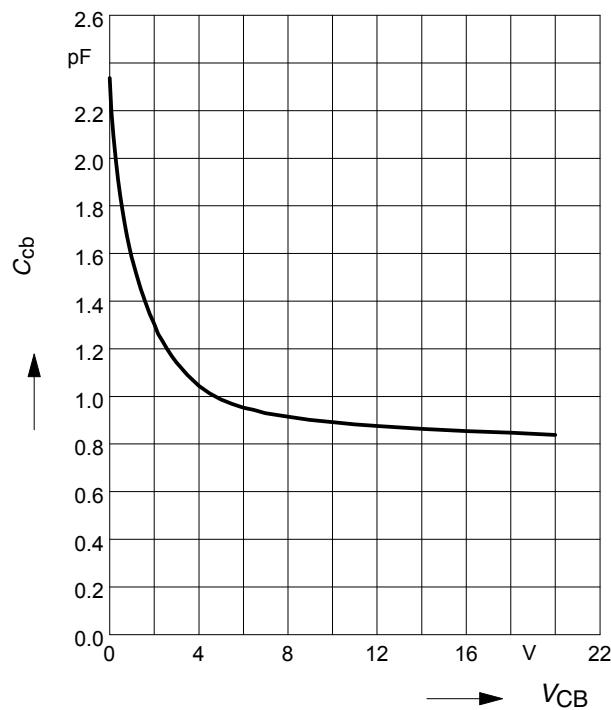

**Transition frequency**  $f_T = f(I_C)$


$V_{CE}$  = Parameter

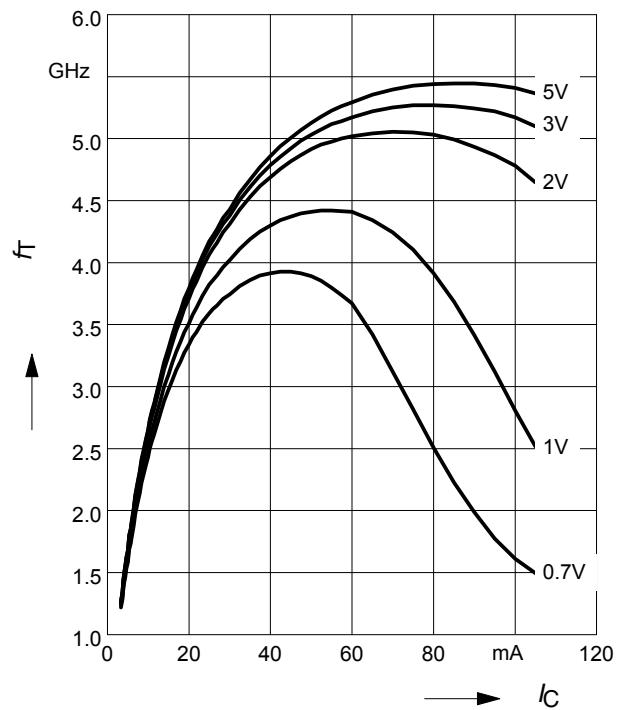

**Power Gain**  $G_{ma}, G_{ms} = f(I_C)$

$f = 0.9\text{GHz}$


$V_{CE}$  = Parameter

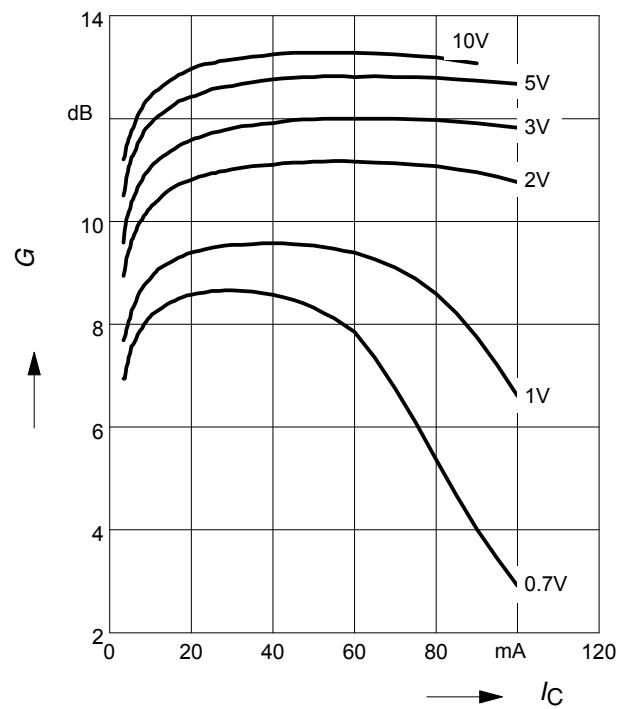

**Power Gain**  $G_{ma}, G_{ms} = f(I_C)$

$f = 1.8\text{GHz}$


$V_{CE}$  = Parameter

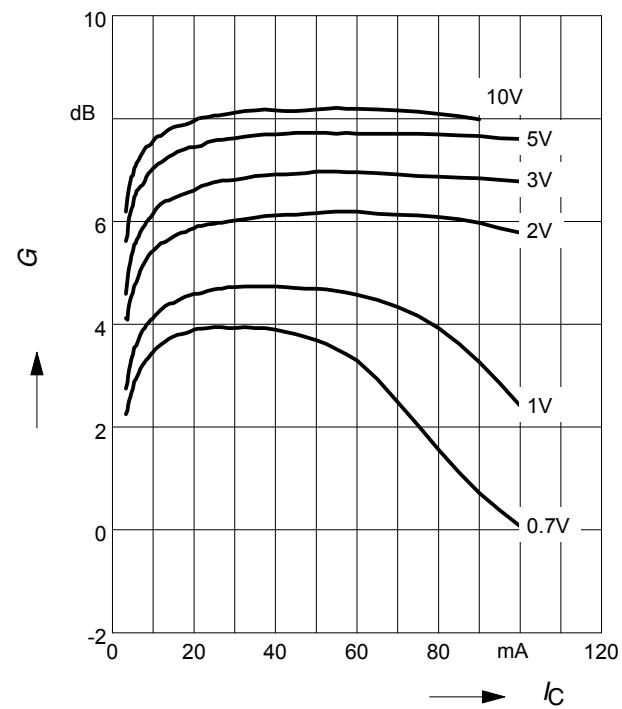

**Power Gain**  $G_{ma}$ ,  $G_{ms} = f(V_{CE})$ : \_\_\_\_\_


$|S_{21}|^2 = f(V_{CE})$ : -----

$f$  = Parameter

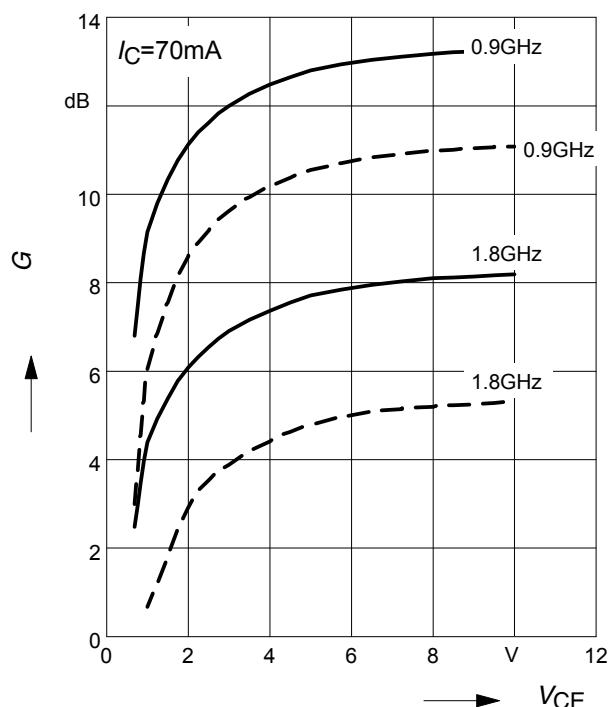

**Power Gain**  $G_{ma}$ ,  $G_{ms} = f(f)$


$V_{CE}$  = Parameter

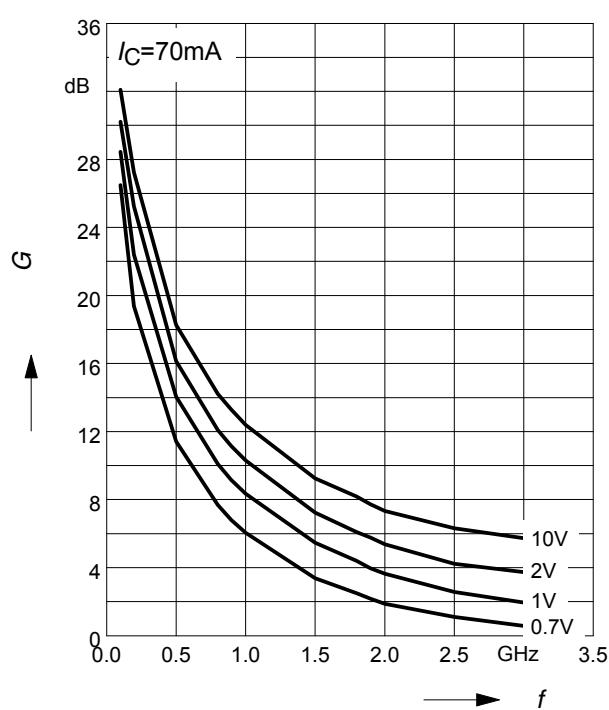

**Intermodulation Intercept Point**  $|P_3=f(I_C)$

(3rd order, Output,  $Z_S=Z_L=50\Omega$ )

$V_{CE}$  = Parameter,  $f = 900\text{MHz}$

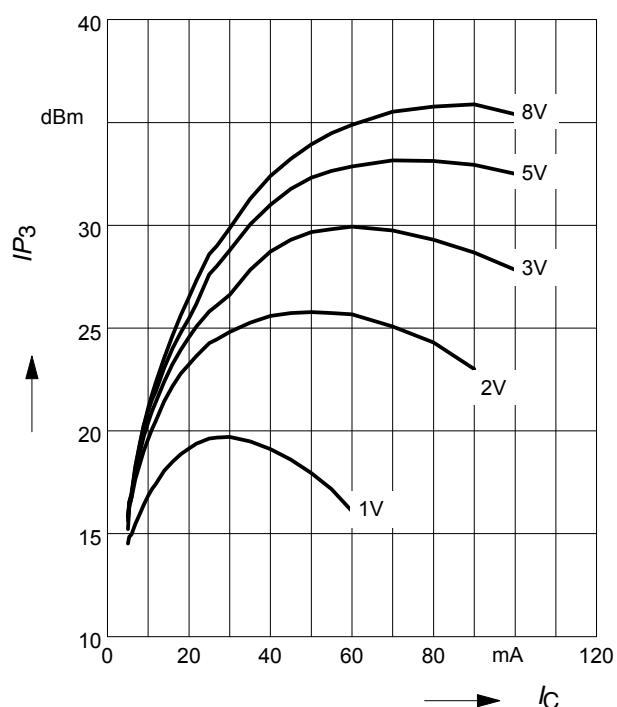

**Power Gain**  $|S_{21}|^2 = f(f)$

$V_{CE}$  = Parameter

